09-040-0279-1

## Installation Instructions Oil Cooler Guard R1100 GS

Contains:

1 x Oil Cooler Guard Aluminium



## Removing upper fender (beak):

- 1) Remove first the left and right upper fairing parts (only the lower fairing parts). These are attached with three screws.
- 2) Remove next the left and right screws that are under the side fairings.
- 3) Now two lower screws only hold the upper fender (beak).
- 4) The beak can now be removed by pulling it out.



## Installation of the Oil Cooler Guard:



Oil Cooler Protection is simply slid on the oil cooler. Rotating of the Oil Cooler Protection is not possible without use of force.

Reinstall upper fender (beak) and fairing parts..