


09-370-0201-1

Installation Instructions Axle Removal Tool KTM LC8

Contains: 1 x Axle removal tool Lc8

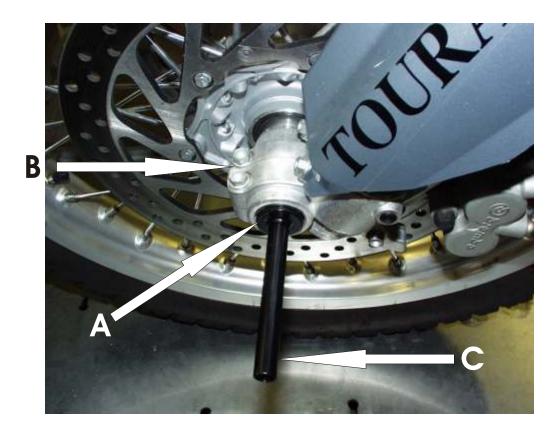

Installation:

Loosen and remove the axle screw SW32 (A) following by the four alxle pinch bolts (B).

Now you can insert the axle removal as shown in the photo (C) and push axle out. Other tools from KTM tool kit that can be inserted in the axle removal tool to help you push the axle further out. Use rubber hammer if necessary.