

09-040-0663-1

Installation Instructions GPS Mount Adapter R1200GS

Contains:

- 1 x GPS mount adapter
- 4 x screw M5x25 V2A
- 4 x washer large M5 V2A
- 4 x spacer

PLEASE READ COMPLETE INSTRUCTIONS PRIOR TO ATTEMPTING INSTALLATION !

Preparation:


You may need to loosen or remove several parts in the cockpit area to gain sufficient access and room for the installation.

First remove the windshield of your R1200GS. Loosen the screws on the sides by the windshield adjustment and remove the bolt, nut and the two spacers. These parts can easily fall out and get lost! Then loosen the two windshield supports in front in the middle of the windshield and remove the windshield.

NOTE: The four bolts on the sides of the BMW tubular cockpit bar are unfortunately painted over and can be very hard to loosen on some bikes! (pic. 1)

We have described TWO ways to gain better accessibility to those bolts and you may also need to scrape the paint off of the sides of the screw heads if they won't open with relative ease. Be careful not to damage the Torx #25 screws!

1st OPTION) Make sure the ignition is off and carefully disconnect the speedometer unit connector on the back. Carefully remove the three silver colored C-clips behind the speedometer unit. Two are pretty easy to remove but the third is harder to get to. You may also need to press them a bit back into shape when reassembling the unit. Now you should have sufficient room to remove the two bolts on both sides of the BMW tubular cockpit bar (pic.1)

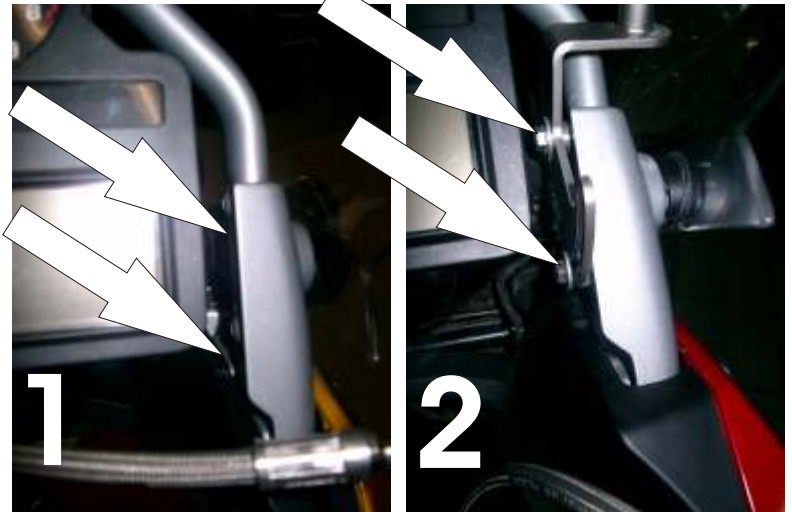

2nd OPTION) Remove headlight guard if such is installed. Loosen the bolt on both side that supports the complete headlight/instrument panel unit. This bolt is right between the blinker and the windshield adjustment. Make sure the ignition is off and carefully disconnect the speedometer unit connector on the back. Now loosen the two bolts on both sides of the silver support bracket that holds the blinkers as well as the BMW tubular cockpit bar. One screw is under the small black plastic cover that pops out quite easily

Installation:

Remove now the two screws as shown on Pic. 1 both sides of the BMW tubular cockpit bar . Install the Touratech GPS mount adapter as shown in Pic. 2 using the supplied M5x25 bolts, spacers between the BMW bar and the Touratech adapter and the M5 washers. Attach new screws first finger tight only. Reinstall the cockpit without the windshield and adjust the bar in wanted position before tightening the screws. CAREFUL not to over tighten the screws since the side supports are rather light material as most other parts on the new light R1200GS! Reconnect the speedometer connector and reinstall other parts.