




Juli 2004

09-044-0282-1

Installation Instructions Motor Guard Intermediate Plate R1200 GS

Contains:

- 1 x Motorguard Intermediate Plate
- 1 x U-shaped Alum. support
- 2 x Domehead Screw M6x16
- 2 x Countersunk Screw M6x16
- 4 x Nylock nut M6
- 6 x Washer M6
- 2 x Rubberized pipe clamp 16mm

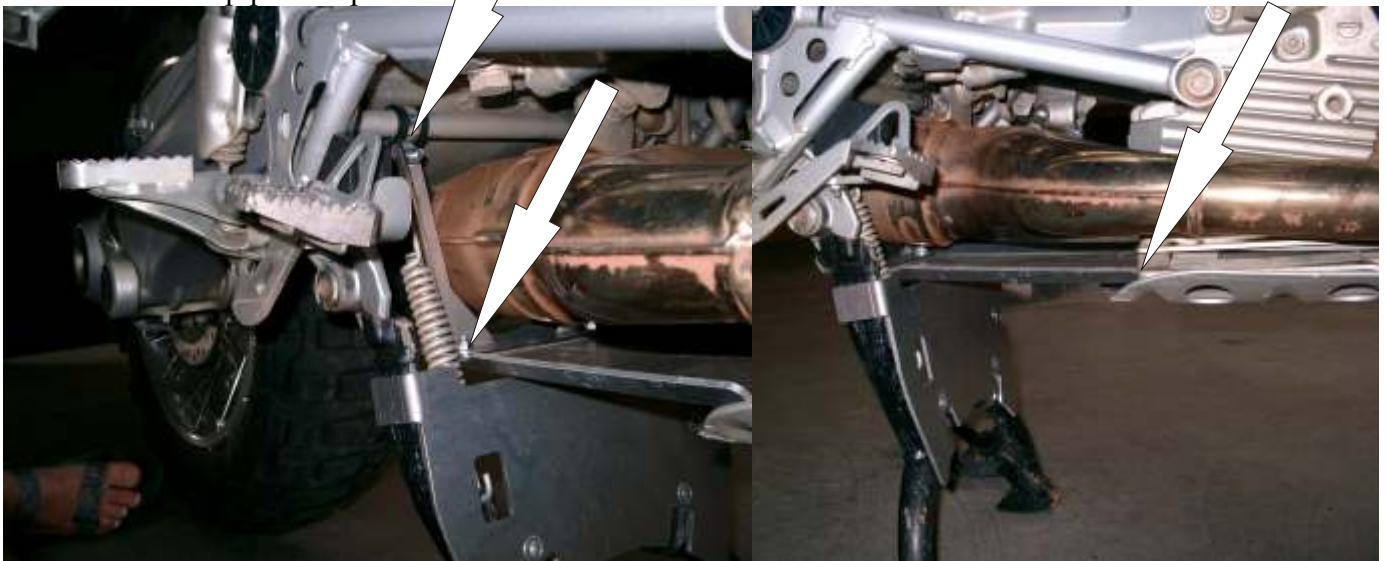

Installation:

First attach the U-shaped alum. support on the motorguard intermediate plate with the two M6x16 countersunk screws, M6 washers and M6 nylock nuts.

Put the rubberized pipe clamps on the tube that is quer accross under paralever joint.

Loosen the rear BMW motor guard attachment bolts. Turn them around so that the longer side of the thread shows downwards. Push the Touratech intermediate plate between the BMW motor guard and the rubber mounts. (or between BMW motor guard and Touratech motor guard reinforcement 044-0300 if installed).

Retighten the rear BMW motor guard attachment bolts.

Attach the U-shaped alum. support on the rubberized pipe clamps with the M6x16 domehead screws, M6 washers and m6 nylock nuts.

Check the tightness of all nuts and bolts.