



# TOURATECH

TOURING RALLYE RACING TECHNOLOGY




Juli 2004

## 09-044-0300-1

### Installation Instructions Motor Guard Reinforcement R1200GS

Parts included:

- 1 x Motor Guard Reinforcement plate
- 1 x Reinforcement Bracket right
- 1 x Reinforcement Bracket left

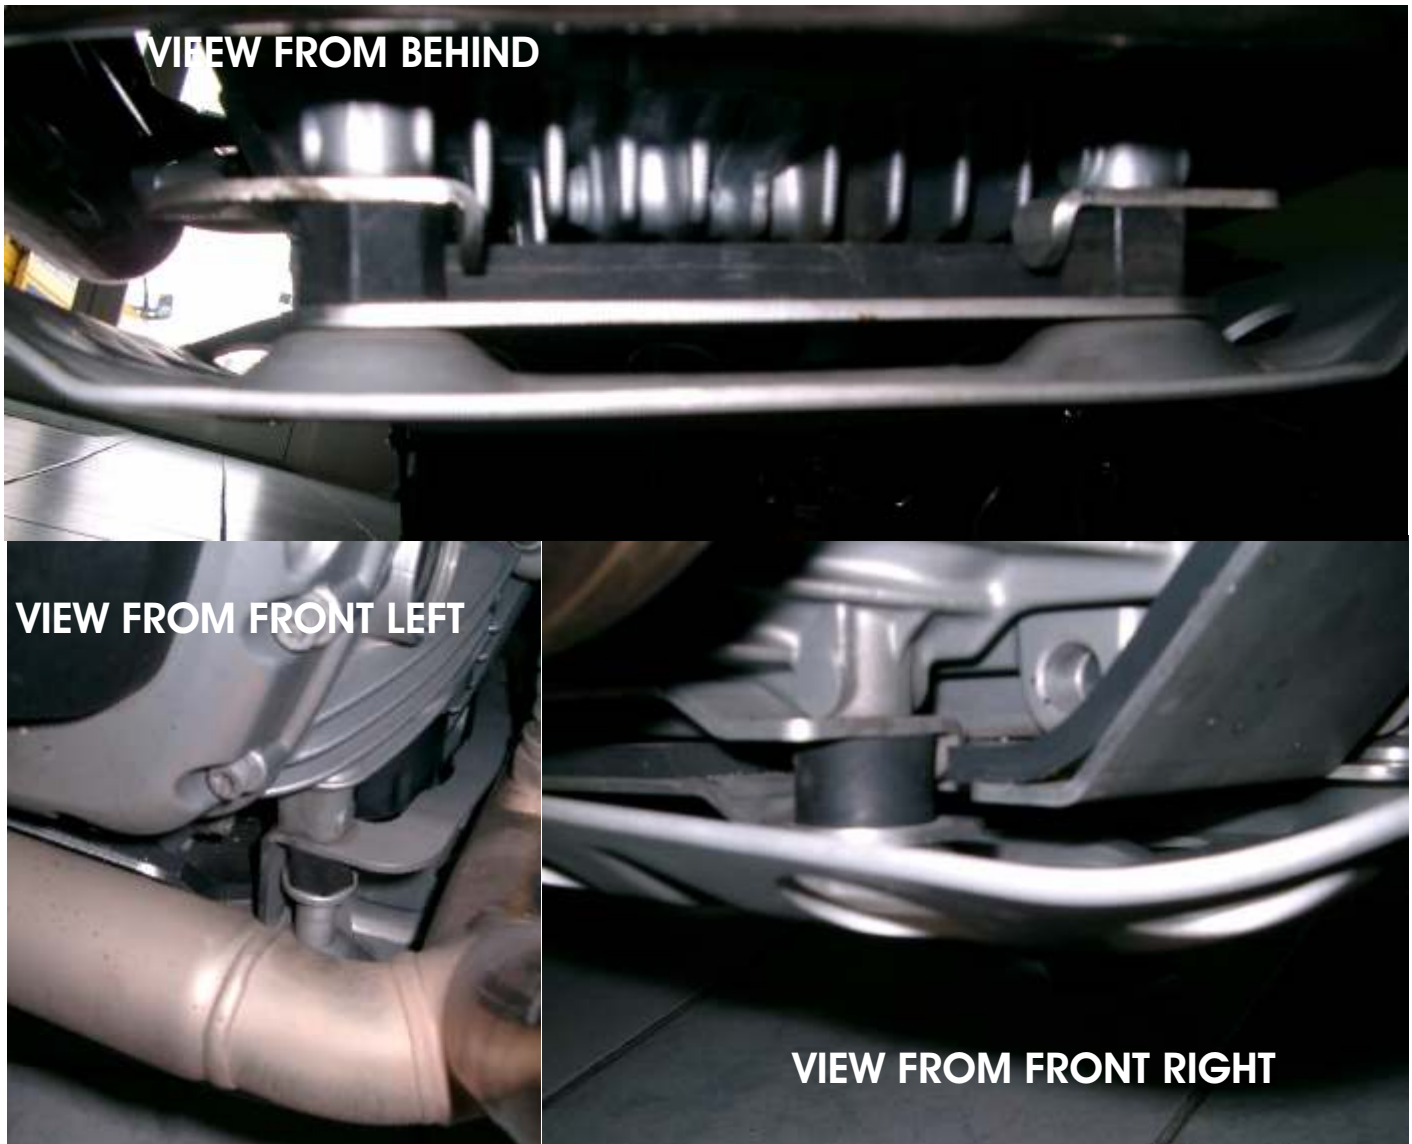

Remove the BMW original motor guard and the rubber isolated bolts/spacers.

Put the reinforcements on the motor and reattach them with the orig. rubber isolated bolts so that the longer side of the rubber isolated bolt thread point downwards.

The reinforcement bracket with long tab goes on the left side; long tab towards the front of the bike.

The other reinforcement bracket goes on the right side; bent end towards the front of the bike.

Set the Touratech Motor Guard Reinforcement on the orig. motor guard, rubber facing up, align the the bolt holes and lift both up under the motor.

Attach with original nuts but CAREFUL not to over torque them!!