
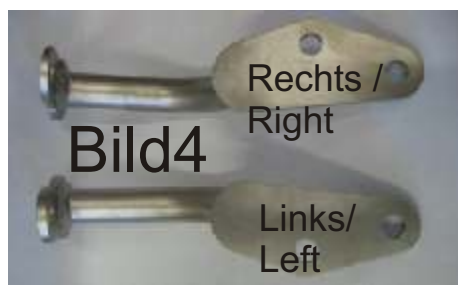


April 2007

DE20070122

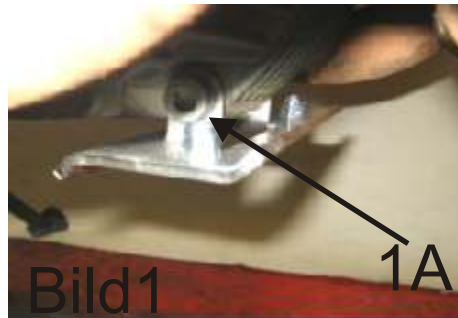

Anleitung: Motorschutz BMW HP 2

Lieferumfang:

- 1 x Motorschutz
- 1 x Halterung vorne 1A
- 1 x Abstützung hinten
- 1 x Halterung Mitte rechts
- 1 x Halterung Mitte links
- 2 x Klemme kurz
- 2 x Klemme lang
- 2 x Schelle gummiert
- 4 x Zylinderkopfschraube M8x20
- 4 x Zylinderkopfschraube M8x55
- 6 x Mutter selbstsichernd M8
- 14 x U-Scheibe M8
- 2 x Zylinderkopfschraube M6x25
- 2 x Senkkopfschraube M6x16
- 4 x Mutter selbstsichernd M6
- 6 x U-Scheibe M6 klein

Montage

1. Demontieren Sie zuerst den Original-Motorschutz mit der vorderen Halteplatte
2. Montieren Sie dann Halterung vorne wie in Bild 1! Verwenden Sie dazu die Original-Schraube und Mutter! Halterung parallel zur Ölwanne ausrichten und Schraube / Mutter festziehen!
3. Montieren Sie die Abstützung hinten wie in Bild 2 und 3 abgebildet mit

- 2 x Schelle gummiert
- 2 x Zylinderkopfschraube M6x25
- 4 x U-Scheibe M6 klein
- 2 x Mutter selbstsichernd M6

ACHTUNG! SCHRAUBEN NOCH NICHT FESTZIEHEN!

4. Halterungen Mitte rechts und links wie in Bild 5 zwischen Rahmen und Krümmer einfädeln!

ACHTUNG! BILD 4 BEACHTEN!

Installation Instructions: Motor Guard BMW HP 2

:Contains:

- 1 x Motor guard aluminium
- 1 x Bracket (front) 1A
- 1 x Motor guard rear support
- 1 x Bracket (center right)
- 1 x Bracket (center left)
- 2 x Clamp (shorter)
- 2 x Clamp (taller)
- 2 x Rubber clamp 16mm
- 4 x Screw hexagon socket head M8x20
- 4 x Screw hexagon socket head M8x55
- 6 x Nylock nut M8
- 14 x Washer M8
- 2 x Screw hexagon socket head M6x25
- 2 x Screw counter sunk M6x16
- 4 x Nylock nut M6
- 6 x Washer M6

Installation

1. Remove first the original BMW motor guard with the original front bracke and rear rubber mounts. Special front screws can carefully be removed with 1/4" or 6.5mm and 5/16 or 8mm sockets if you do not have correct tools.
2. Attach the new bracket (front 1A) using The original nut and bolt. The bracket Must be parallel to the sump. See photo 1.
3. Attach the motor guard rear support. See photo 2 + 3 (view from rear to front).

- 2 x Rubber clamp 16mm
- 2 x Screw hex socket head M6x25
- 4 x Washer M6
- 2 x Nylock nut M6



ATTENTION: DO NOT TIGHTEN THE SCREWS YET!

4. Bring the center-right & left brackets in place between the frame and exhaust. Just leave hanging for now - will be installed with clamps on pos. 5 (see next page). Photo 5.

NOTE: PAY ATTENTION TO LEFT AND RIGHT BRACKETS ON PHOTO 4!

Anleitung: Motorschutz
BMW HP 2

Installation Instructions:
Motor Guard BMW HP 2

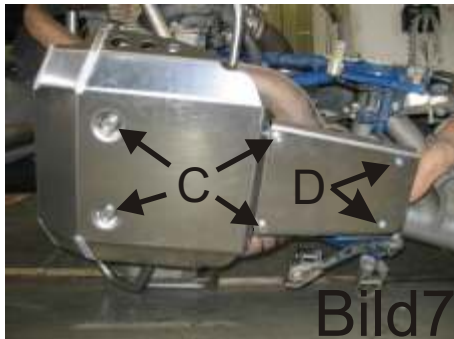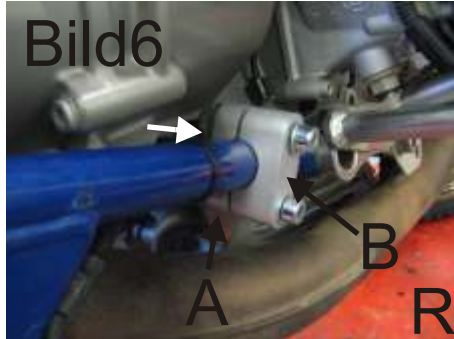

Lieferumfang:

- 1 x Motorschutz
- 1 x Halterung vorne
- 1 x Abstützung hinten
- 1 x Halterung Mitte rechts
- 1 x Halterung Mitte links
- 2 x Klemme kurz
- 2 x Klemme lang
- 2 x Schelle gummiert
- 4 x Zylinderkopfschraube M8x20
- 4 x Zylinderkopfschraube M8x55
- 6 x Mutter selbstsichernd M8
- 14 x U-Scheibe M8
- 2 x Zylinderkopfschraube M6x25
- 2 x Senkkopfschraube M6x16
- 4 x Mutter selbstsichernd M6
- 6 x U-Scheibe M6 klein

Montage

5. Montieren Sie anschließend wie in Bild 6.

pro Seite

- A) 1 x Klemme kurz
- B) 1 x Klemme lang

mit je

- 2 x Zylinderkopfschraube M8x55
- 4 x U-Scheibe M8
- 2 x Mutter selbstsichernd M8

ACHTUNG! SCHRAUBEN UND MUTTERN NOCH NICHT FESTZIEHEN!

6. Befestigen Sie zum Schluss den Motorschutz wie in Bild 7 mit

- C) 4 x Zylinderkopfschraube M8x20
- 6 x U-Scheibe M8
- 2 x Mutter selbstsichernd M8

- D) 2 x Senkkopfschraube M6x16
- 2 x U-Scheibe M6 klein
- 2 x Mutter selbstsichernd M6

ALLE SCHRAUBEN FESTZIEHEN!

:Contains:

- 1 x Motor guard aluminium
- 1 x Bracket (front)
- 1 x Motor guard rear support
- 1 x Bracket (center right)
- 1 x Bracket (center left)
- 2 x Clamp (shorter)
- 2 x Clamp (taller)
- 2 x Rubber clamp 16mm
- 4 x Screw hexagon socket head M8x20
- 4 x Screw hexagon socket head M8x55
- 6 x Nylock nut M8
- 14 x Washer M8
- 2 x Screw hexagon socket head M6x25
- 2 x Screw counter sunk M6x16
- 4 x Nylock nut M6
- 6 x Washer M6

Installation:

5. Install now the center brackets together with the clamps (bracket goes behind the clamps - see white arrow photo 6). Bolt & washer on outside and washer & nylock behind the bracket. Photo 6

Right + left.

- A) 1 x clamp (short)
- B) 1 x clamp (tall)

each with

- 2 x Screw hex socket head M8x55
- 4 x Washer M8
- 2 x Nylock nut M8

ATTENTION: DO NOT TIGHTEN THE SCREWS

6. Attach the motor guard. See photo 7.

- C) 4 x Screw hex socket head M8x20
- 6 x Washer M8
- 2 x Nylock nut M8

- D) 2 x Screw counter sunk M6x16
- 6 x Washer M6
- 4 x Nylock nut

MAKE SURE MOTOR GUARD IS PROPERLY ALIGNED ALL AROUND AND TIGHTEN ALL SCREWS!