

Januar 2006


January 2006

Anleitung Schutz Drosselklappenpoti links BMW HP2


Instruction: Throttle Potentiometer Cover BMW HP2

Lieferumfang:
 1 x Schutz Drosselklappenpoti
 2 x Distanz 14mm
 2 x Schraube Linsenkopf M4x40

Contains:
 1 x Throttle Potentiometer Cover alum.
 2 x Spacer aluminium 14mm
 2 x Dome head hex screw M4x40

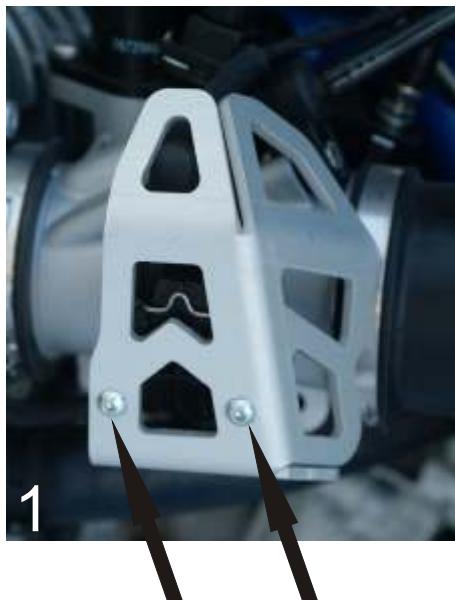
Achtung: Wichtige Hinweise zur Montage

Attention: important tips, explanations
Throttle potentiometer is factory set
and when removing the stock screws
it is important to leave the unit in place to avoid any changes.

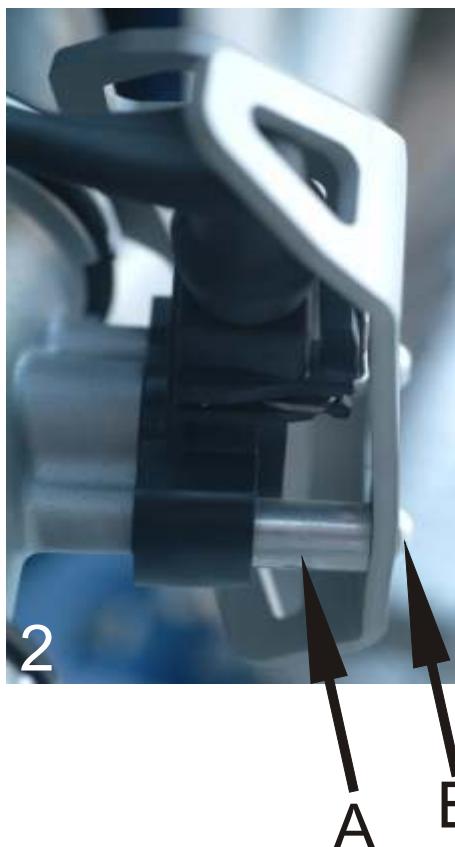

Schrauben Sie die originalen Schrauben des Drosselklappenpotis heraus.
 Montieren Sie nun das Drosselklappenpoti zusammen mit dem Schutz. Die Befestigung erfolgt mit den beiden Schrauben Linsenkopf M4x40 ("B") und Distanzen ("A").

Remove the stock screws that hold the throttle potentiometer.
 Insert screws M4x40 thru the holes on the potentiometer cover, put spacers 14mm(A) on the screws (B) and attach the potentiometer again together with the Touratech cover.