

August 2006


**Anleitung Gepäckbrücke klein
BMW Hp2**
Lieferumfang:

- 1 x Gepäckbrücke vormontiert
- 4 x U-Scheibe M5 groß
- 4 x Distanz 3mm schwarz
- 4 x Linsenkopfschraube M5 x 25

**Installation Instruction: Luggage
Rack Small BMW Hp2**
Contains:

- 1 x Luggage rack preassembled
- 4 x Washer M5 large
- 4 x Spacer 3mm black
- 4 x Screw dome head M5x25

Achtung! Wichtige Hinweise
Beladung max. 5kg!
Attention: important tips, explanations
Maximum load 5kg or 10 lbs!
1
Montage

1. Nehmen Sie zuerst die Sitzbank ab
2. Demontieren Sie dann die Original-Gepäckbrücke
3. Verschrauben Sie die Gepäckbrücke wie in Bild 1 und 2 wie folgt:

an A:

- 2 x Distanz 3mm schwarz
- 2 x U-Scheibe M5 groß
- 2 x Linsenkopfschraube M5 x 25

an B:

- 2 x Distanz 3mm schwarz
- 2 x U-Scheibe M5 groß
- 2 x Linsenkopfschraube M5 x 25

Installation

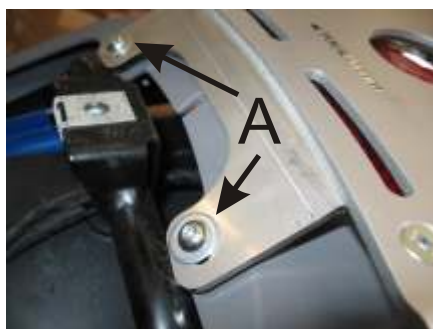
1. Remove first the seat.
2. Remove then the original rear rack.
3. Attach the Touratech luggage rack as shown on photos 1 and 2 using following hardware:

Pos. A:

- 2 x Spacer 3mm black
- 2 x Washer M5 large
- 2 x Screw dome head M5x25

Pos. B:

- 2 x Spacer 3mm black
- 2 x Washer M5 large
- 2 x Screw dome head M5x25


2
