


April 2006

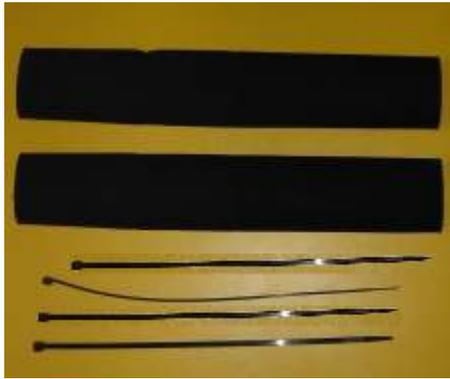

Anleitung Gabelschützer Neopren Hp2 geschlossen

Lieferumfang:

2 x Gabelschützer Neopren geschlossen
4 x Kabelbinder 290mm

Achtung! Wichtige Hinweise

Der Anbau ist nur von geschultem Fachpersonal und unter Zuhilfenahme von geeignetem Werkzeug durchzuführen.

Achten Sie beim Demontieren und Montieren der Gabel auf die Herstellerangaben!

Montage

Sichern Sie das Motorrad so, dass der Ausbau der Gabel bewerkstelligt werden kann.

Lösen Sie die Klemmungen der Gabelholme und die Verschraubungen der Kunststoffabdeckung des Gleitrohres (Bild 1).

Entnehmen Sie die Gabelholme aus den Halterungen.

Schieben Sie den Neoprenschutz über die Gabelholme.

Sichern Sie das obere und untere Ende mit den mitgelieferten Kabelbindern (Bild 2).

Montieren Sie die Gabel und die Kunststoffabdeckung in umgekehrter Reihenfolge (Bild 1).

Vergewissern Sie sich, dass beide Gabelholme auf der selben Höhe eingebaut werden.

Achten Sie beim Anziehen der Verschraubungen auf das richtige Drehmoment.

Kontrollieren Sie nach Beenden der Montagearbeiten alle Verschraubungen.

Installation Instruction: Neoprene Fork Protector Closed Hp2

Contains:

2 x Fork protector neoprene closed
4 x Cable tie

Attention:

This installation should only be performed by a BMW professional using proper BMW tools.

Pay attention to BMW torque specs when tightening and removing fasteners.

Removal of the front wheel and/or other parts may make installation easier and lighter.

Installation:

Secure the motorcycle so that the removal of front forks is manageable and note the height of the forks in the fork clamps.

Loosen the top and lower fork clamp fasteners securing the front forks (photo 1).

Pull the front forks out of the top and lower fork clamps.

Remove the stock plastic fork guards.

Push the neoprene fork protectors on the forks.

Secure the top and bottom of the protectors additionally with supplied cable ties (photo 2).

Reinstall all parts using BMW torque specs.

Make sure both forks are reinstalled on same level.

Check installation and fasteners prior your first ride.

