

01-048-0346-0

Januar 2008

April 2008

DE20070122



Anleitung:
Rahmenschutz rechts

Lieferumfang:
1xRahmenschutz rechts
3xKabelbinder

Achtung! Wichtige Hinweise
Kontrollieren Sie bitte von Zeit zu Zeit
den Sitz des Rahmenschutzes

Installation Instruction: Frame
Guard right F650(twin)/800GS

Contains:
1 x Frame guard right side
3 x Cable tie

Attention! Important tips, explanations:
Check that guard is securely attached
in regular intervals



Montage


1. Reinigen Sie den Rahmen ihres Motorads sorgfältig
2. Um den Rahmenschutz aufsetzen zu können, müssen die im Bild 1 bezeichnete Schraube entfernen.
3. Fixieren Sie den Rahmenschutz am Rahmen ihres Motorads. Drücken Sie nun den Rahmenschutz am Rahmen fest.
4. Befestigen Sie den Rahmenschutz, indem Sie ihn auf den Rahmen setzen. Befestigen Sie ihn mit der von Ihnen entfernten Schraube. Sichern Sie den Rahmenschutz zusätzlich mit den im Lieferumfang enthaltenen Kabelbindern, an den im Bild 2 bezeichneten Stellen.

5. Überprüfen Sie alle Montierten Teile auf festen Sitz!

Viel Spaß

Assembly

1. Clean the motorcycle frame carefully around the area seen in photo 2.
2. Remove the screw shown in photo 1.
3. Press the guard on the frame of the motorcycle as seen on photos 1+2.
4. Secure the guard with the original screw and additionally with supplied cable ties in the positions shown in photo 2.
5. Check for tight and secure fit before your first ride and then in regular intervals.

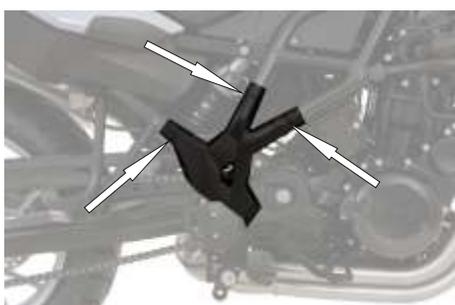

2