

TOURATECH


TOURING RALLYE RACING TECHNOLOGY

09-053-0051-1


Installation Instructions Top Case Bracket R11xxGS

Contains:

- 1 x Top box bracket
- 1 x Top box bracket top plate
- 1 x Top box X-brace
- 4 x Countersunk screw M6 x 20
- 5 x Countersunk screw M6 x 12
- 4 x Nut M6
- 5 x Cap nut M6
- 5 x Washer large M6
- 8 x Washer M6
- 2 x Key

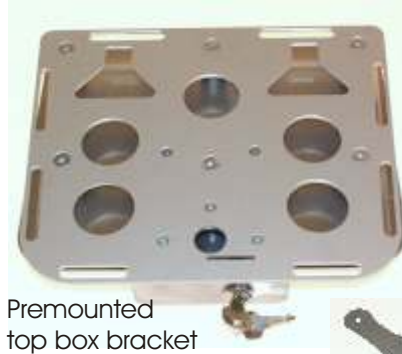

Premounted
top box bracket

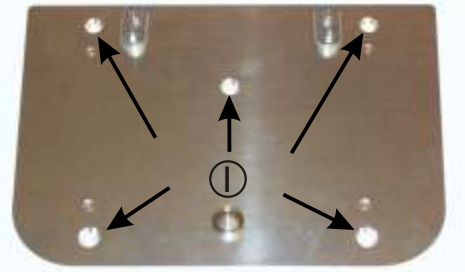

Top box bracket
top plate



X-shaped reinforcement
plate (installed inside top box)

Installation:

Remove the hand grip on the stock rear rack. The two front screws will be used with the top box bracket and the two rear screws are supplied with mounting material (2 x M6x20).

The installation is easier if you disassemble the two layers and reinstall when the bottom layer is attached on the bike rear rack.

Center the plate on the bottom of the Zega Case, mark the 5 holes (top right photo with #1) and drill to a diameter of 6.5 mm.

The X-shaped reinforcement plate has 5 holes corresponding to holes in the plate that fastens to the bottom INSIDE the Zega case

Fasten with the 5 short machine screws countersunk on the bottom of the plate, the 5 large washers and 5 dome nuts on the inside of the Zega Case. Use locktite or similar thread locking compound.

To attach the Zega case to the rack,

slide the 2 rectangular latches at the front of the case into the guides and pull the latch towards you.

The box should fall flush with the rack and the latch plate should retract toward the front of the case.

It may take a coaxing for this to happen until the latch loosens up a little. Turn the key to the right to lock.

The lock must ALWAYS BE LOCKED when driving.

To remove the Zega case from the rack, see the first step above.

Consider the weight of the Zega case and contents when loading your motorcycle.

Do not exceed the maximum load limits for the make and model of your motorcycle.

DO NOT exceed 130km/h or about 78 MPH with the Zega case installed.

Use these instructions at your own risk. These instructions are new and have not been tested by independent installers. Touratech and Touratech-USA assume no responsibility for errors using these suggestions. If you have any doubts about your ability to install the top box, please contact a professional mechanic.

