



TOURATECH

TOURING RALLYE RACING TECHNOLOGY



Januar 2004

01-065-0065-0, 01-065-0066-0
01-065-0067-0, 01-065-0068-0

instruction handlebar bracket Street Pilot 2610


Install the handlebar mount on the (12 mm) crossbar. You will need an 8mm wrench. To protect the mount from crash damage, tighten the nuts just enough that you can still rotate the mount with some effort. For the assembly of your handlebar mount on motorcycles without a crossbar there are many adaptors (e.g. a ball joint adapter unit) Please check with your TOURATECH dealer for details.

Don't use this handlebar bracket with an StreetPilot 2620! You'll get problems with the micro drive of this GPS unit! The Street Pilot 2620 is not made for the application on motorcycles. Problems with those GPS-units are not because of our handlebar bracket, but because of the micro drive. So it's not a reason for complaints!



To get your GPS 2610 in the bracket, you'll have to tilt the adjustable mount at the back completely backwards (pic. 1).

Then open the locking lever, by pulling it on the back and pushing it in the front, as shown on pic. 2. Now you can move your GPS 2610 into the bracket so that round (toothed) disk at the bottom fits into the clearance. Close the locking lever so that it noticeably snaps in. Lockable brackets can get locked now. Other versions need to get secured by tightening the enclosed screw. (pic. 4)

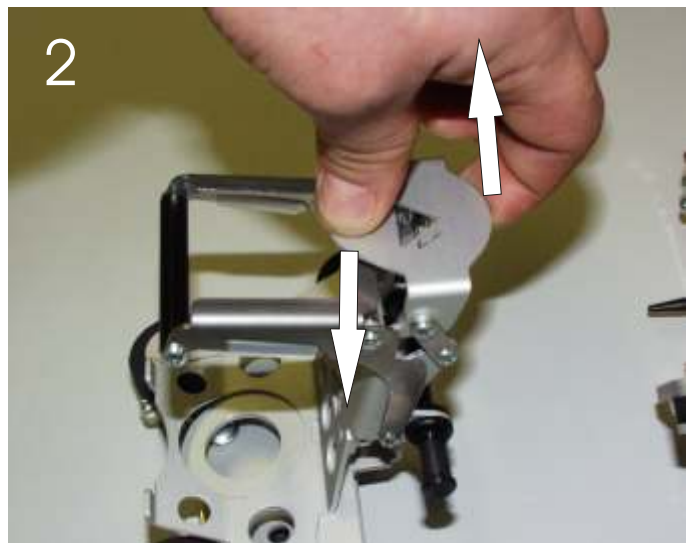

Lockable version (pic. 3):

On the right side you can find a special mount for your power cable. To remove the power cable from that holder please lift it slightly on the right side.



All versions:

At the back you'll find a plastic pen to handle the touchscreen with gloves.

Attention: Always take a look, that your GPS unit is attached securely to your bracket!
TOURATECH does not take any responsibility for damaged or lost GPS units.