

TOURATECH


TOURING RALLYE RACING TECHNOLOGY

09-300-0100-1

Installation Instructions Chain Guard Aluminium F650 GS

Contains:

- 1 x Chain guard aluminium (A)
- 1 x Chain guard support (B)
- 1 x ABS sensor cover for left side (C)
- 1 x Spacer bolt M4x40(D)
- 4 x Screw dome head M6x16
- 2 x Screw dome head M5x10
- 2 x Screw dome head M4 x 12
- 2 x Nylock nut M5
- 4 x Washer small M6
- 2 x Washer small M5
- 2 x Washer large M4

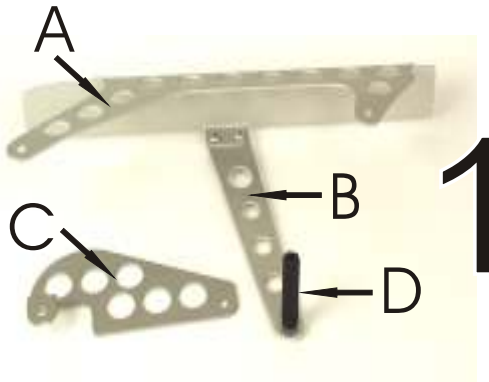

Installation:

1. Preparation of your BMW F650GS:
Remove the stock chain guard of your F650GS.
Tool kit tools can be used for this.

2. Preparation of the aluminium chain guard:
The aluminium chain guard needs to be preassembled as shown on photo 1.
The chain guard support (B) is attached on the outside, behind, the chain guard and it is slightly leaned outwards, or right. The support (B) is attached to the chain guard (A) with two M5x10 screws, washers M5 and nylock nuts M5. Make sure to insert the screws from inside out so that the dome heads are towards the chain. The washers are set under the nylock nuts.
The spacer bolt M4x40 (D) is attached on the chain guard support (B) with one dome head screw M4x12 and one washer large M4.

3. Installation of the aluminium chain guard:
The preassembled chain guard is now attached on the swing arm with two dome head screws M6x16 and two washers M6 as shown on photo 2.
Use dome head screw M4x12 and one washer large M4 to attach the chain guard support (B) on the bottom of the swing arm.

4. Installation of the ABS sensor cover:
The ABS sensor cover is attached on the left side at original attachment points on the swing arm with dome head screws M6x16 and washers M6 as shown on photo 3.

