

# TOURATECH


TOURING RALLYE RACING TECHNOLOGY

09-300-0110-1

## Installation Instructions Aluminium Front Sprocket Cover F650GS

Contains:

- 1 x Front sprocket spray cover (A)
- 1 x Front sprocket cover with holes (B)
- 1 x Screw hex M6x55
- 1 x Screw hex M6x50
- 2 x Washer small M6

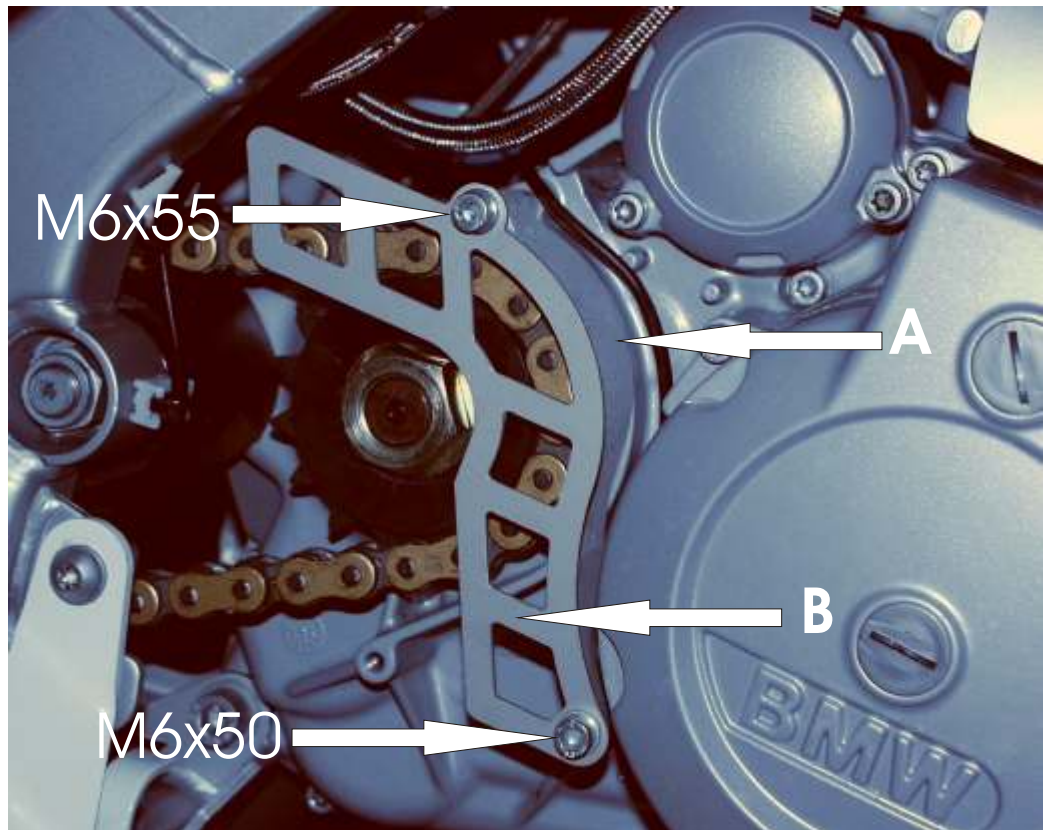

### Installation:

Remove the stock sprocket cover and attach the Touratech aluminium cover with supplied screws M6x50 (bottom) and M6x55 (top) and washers.

Make sure to insert the screws through the sprocket cover as well as the spacers that are welded on the spray cover. Spray cover may sometimes need to be pressed slightly to match bores to the attachment points on the motor.