

Januar 2007

January 2007


**Anleitung Ritzelschutz Alu
KTM 950 Superenduro**
Lieferumfang:

- 1 x Blende Alu
- 2 x Distanz Alu 22mm
- 2 x U-Scheibe M6 klein
- 1 x Zylinderkopfschraube M6 x 35
- 1 x Zylinderkopfschraube M6 x 40

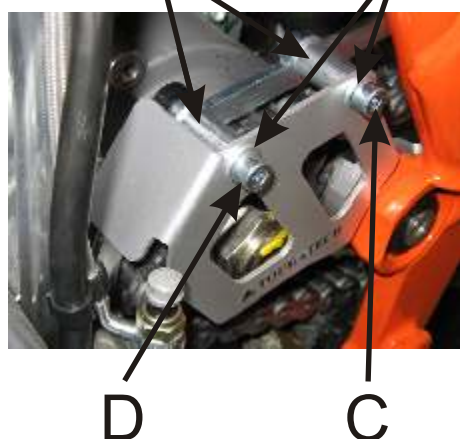
Achtung! Wichtige Hinweise

Der Ritzelschutz Alu kann zusammen mit unserem Rahmenschutz 370-0150 montiert werden!

Montage

1. Entfernen Sie den Kabelbinder und die originalen Schrauben der Kunststoff-Blende (3 Stück)
2. Entfernen Sie die originale Kunststoff-Blende
3. Befestigen Sie den Ritzelschutz Alu wie folgt:

- A) Distanz Alu 22mm
- B) U-Scheibe M6 klein
- C) Zylinderkopfschraube M6 x 35
- D) Zylinderkopfschraube M6 x 40


**Installation Instruction: Sprocket
Cover KTM**
Contains:

- 1 x Sprocket cover Aluminum
- 2 x Spacer aluminum 22mm
- 2 x Washer M6 small
- 1 x Screw dome head M6 x 35
- 1 x Screw dome head M6 x 40

Attention: important tips, explanations

Sprocket cover can be installed together with frame protectors 370-0150

Installation

1. Remove the cable tie and the original screws of the plastic cover (3 screws).
2. Remove then the original cover.
3. Install the Touratech cover as follows:

- A) Spacer 22mm
- B) Washer M6 small
- C) Screw dome head M6 x35
- D) Screw dome head M6 x 40