

01-410-0240-0

DE20080314

Mai 2010

May 2010



Anleitung:
Motorschutz
Husqvarna 630 TE, Bj.2010
Lieferumfang:

1x Motorschutz
2x Schelle
2x Mutter M6 selbstsichernd
2x Senkkopfschraube

Achtung! Wichtige Hinweise

Alle Schraubverbindungen nach 50Km kontrollieren und nachziehen!

Bei zusätzlicher Verwendung von Original-Zubehör oder Zubehör anderer Hersteller auf Freigang, Passform und auf mögliche Kollisionen prüfen!

Führen Sie den Anbau nur bei kaltem Motor durch!

Instructions:
Engine guard
Husqvarna 630 TE, from 2010
Contents:

1x Engine guard
2x Clamp
2x Lock nut M6
2x Countersunk screw

Attention: important tips, explanations


Check all screws after 50Km and retighten if necessary!

When fitting with additional accessories, original or third-party, ensure a precise fit and check for possible interference!

To avoid potential burns, mount the guard when the engine is cold.

Original-Sechskantmutter
Original nut

Motorhalterung
Engine bracket

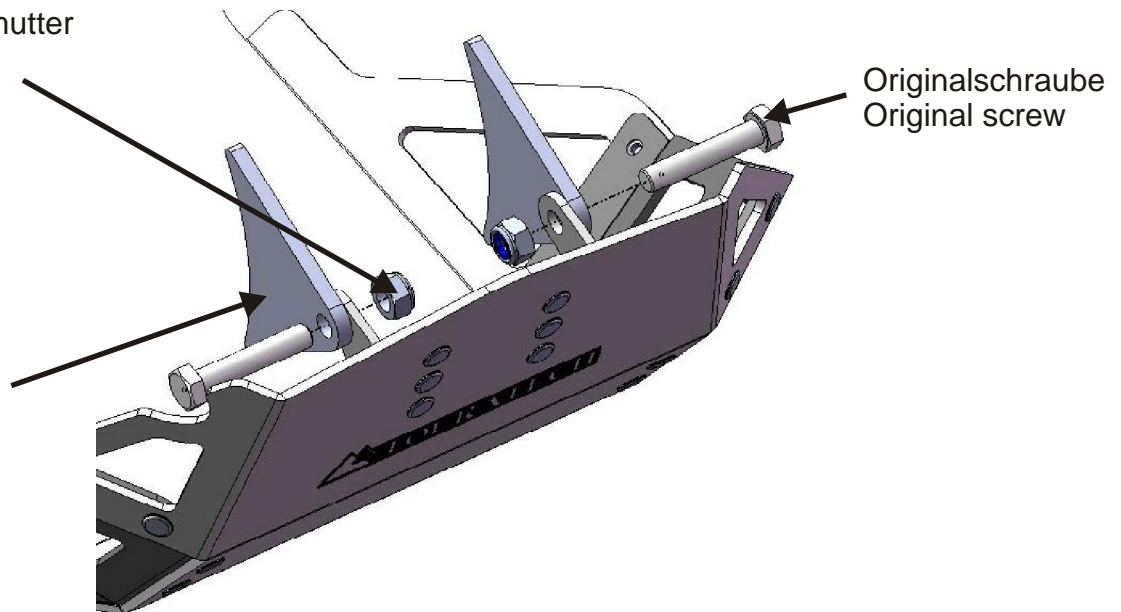

Schelle
Clamp

Senkschraube M6
Countersunk screw M6

Rahmenrohr
Frame

Mutter selbstsichernd M6
Lock nut M6

