


back to:  
[www.touratech-usa](http://www.touratech-usa)

email the [webmaster](#)

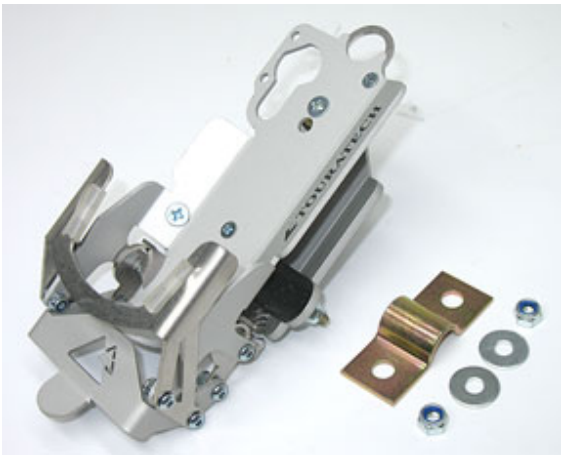

## TOURATECH powercord installation on GPS 60 mounts.

part# 065-0075,  
0077

### Synopsis

The Powercord is held in place permanently, so all you have to do is snap the GPS into the mount and it is powered.

It fits **ONLY** the Garmin brand powercord, it does not fit aftermarket powercords.

It is **NOT possible** to install the GPS into the GPS mount first, and attach the cord next.

**Use these suggestions at your own risk.**

- These instructions are new and have not been tested by independent installers.
- The instructions are not complete, but assist in installation.
- Touratech and Touratech-USA assume no responsibility for errors using these suggestions.

If you have any doubts about your ability to install the power cord, please contact a professional installer.



Insert the powercord wire into the hole. The cut end of the cord must pass thru the opening in the GPS mount chassis.



Align the fllat on the cord with the flat on the cutout in the mount.



Press the cord into the cutout. It fits exactly, very German and very perfect. NOTE it is NOT possible to install the GPS into the mount then insert the power cord.




This is the view from the backside.



The rear retainer fits very tightly, very perfect to the Garmin cord. It fits so tight you may think it does not fit but wiggle it on carefully. It fits ONLY the Garmin cord, (no aftermarket cords).



Ready for the screws.

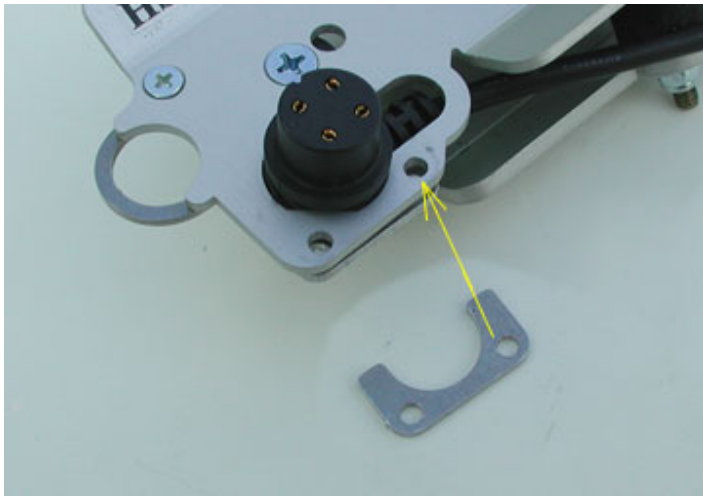

Add the front retainer. It engages the groove on the powercord. It does not fit tightly.



Install and tighten the screws.

[http://www.touratech-usa.com/instl/instl\\_065-0075.html](http://www.touratech-usa.com/instl/instl_065-0075.html)